





Values near lines means pins of keyboard connector.


Numerzy przy liniach oznaczają numery styków w złączu klawiatury.

ATARI 800XL			
Size	Drawn by	REV	
A	Jerzy SOBOLA	1	
Date:	November 1, 2002	Sheet	7 of 9

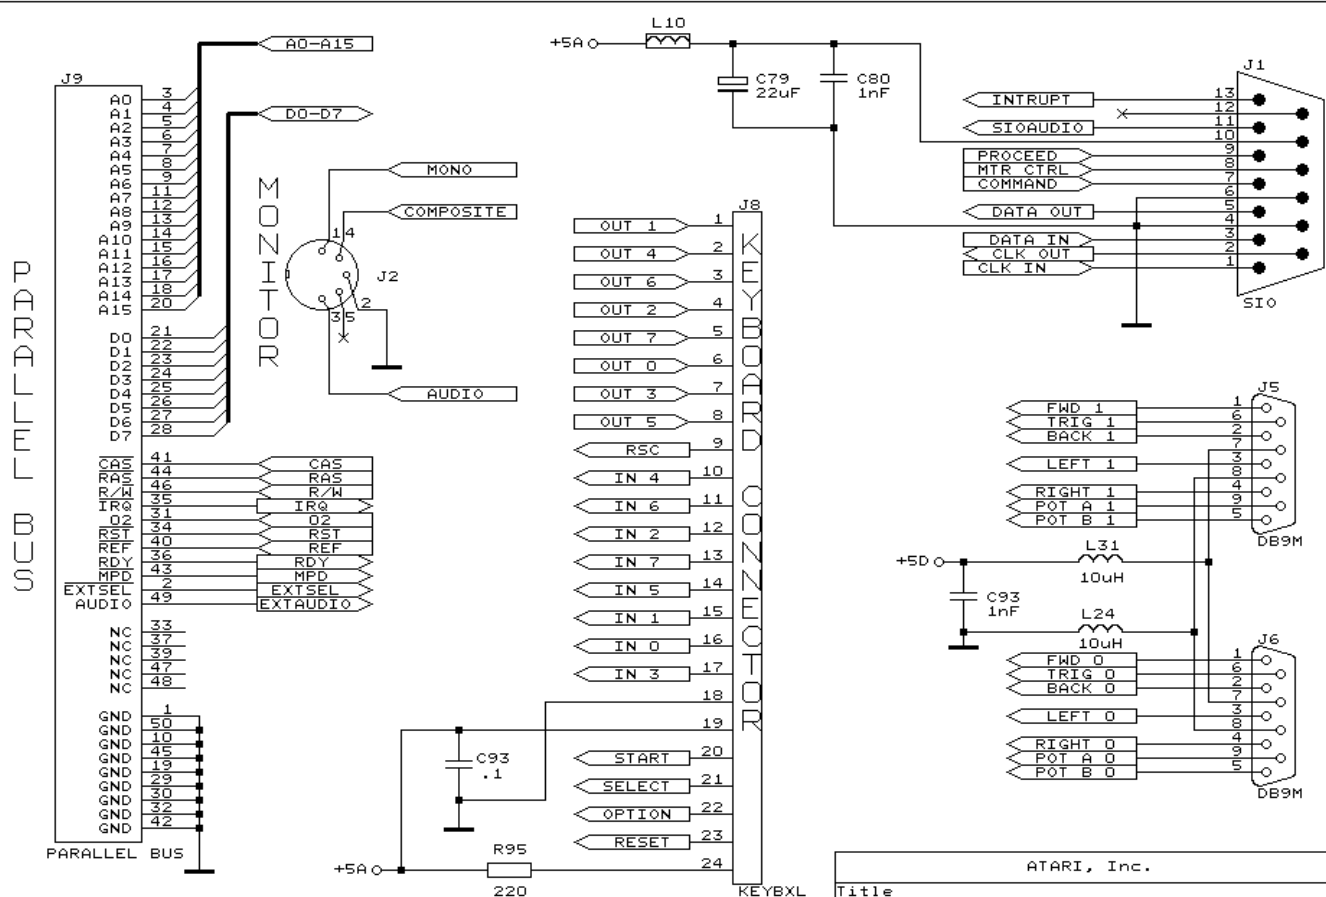


ATARI, Inc.			
Title	ATARI 800XL WITH FREDDIE		
Size	Drawn by	REV	
A	Jerzy SOBOLA	1	
Date:	September 23, 2003	Sheet	9 of 9

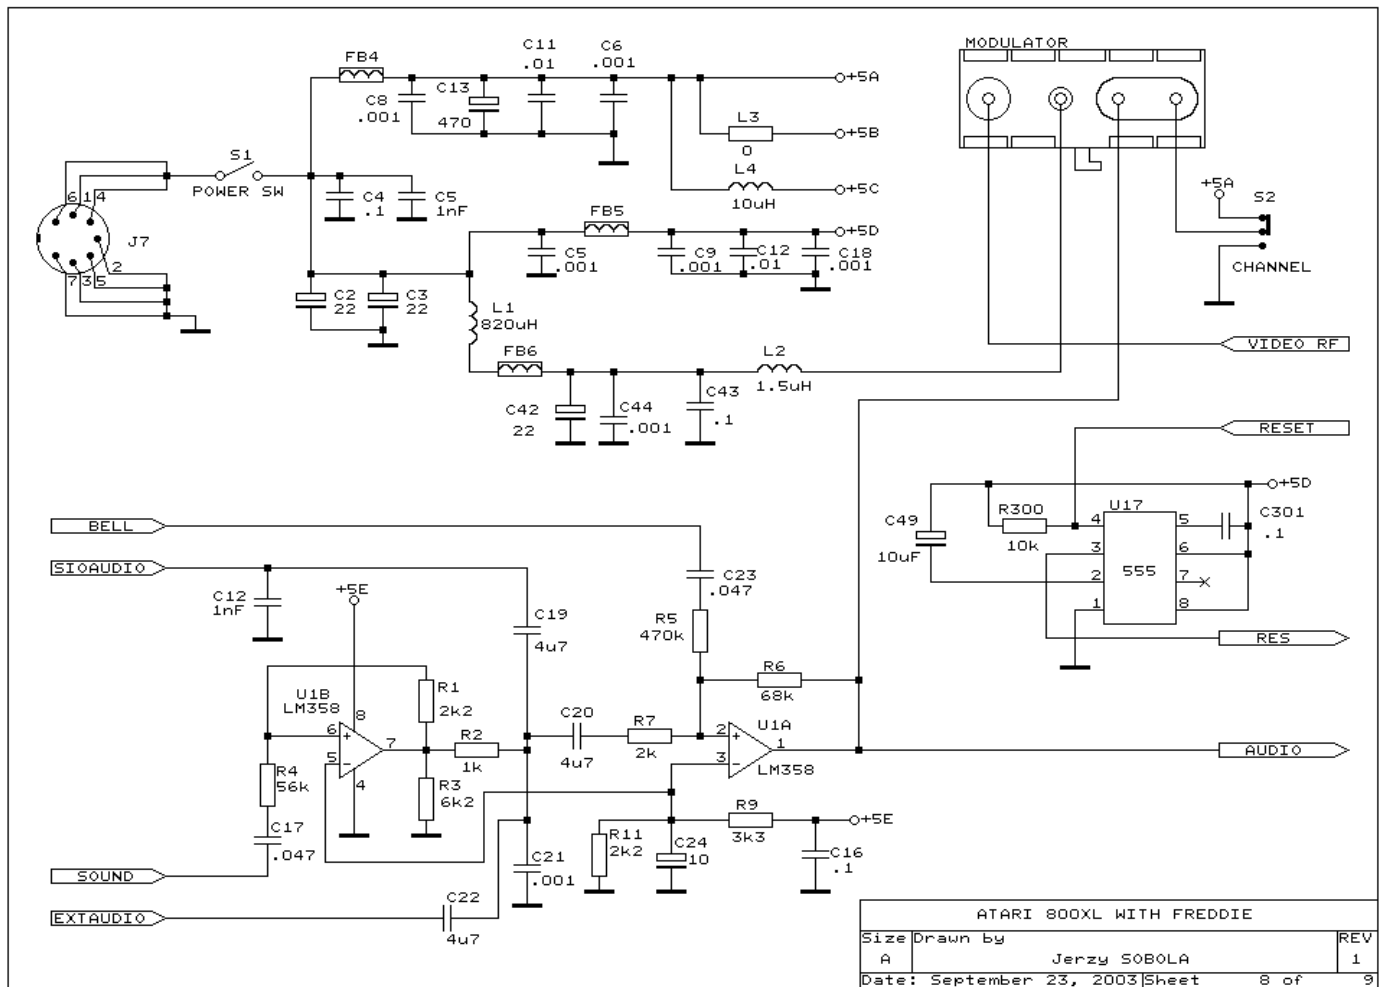

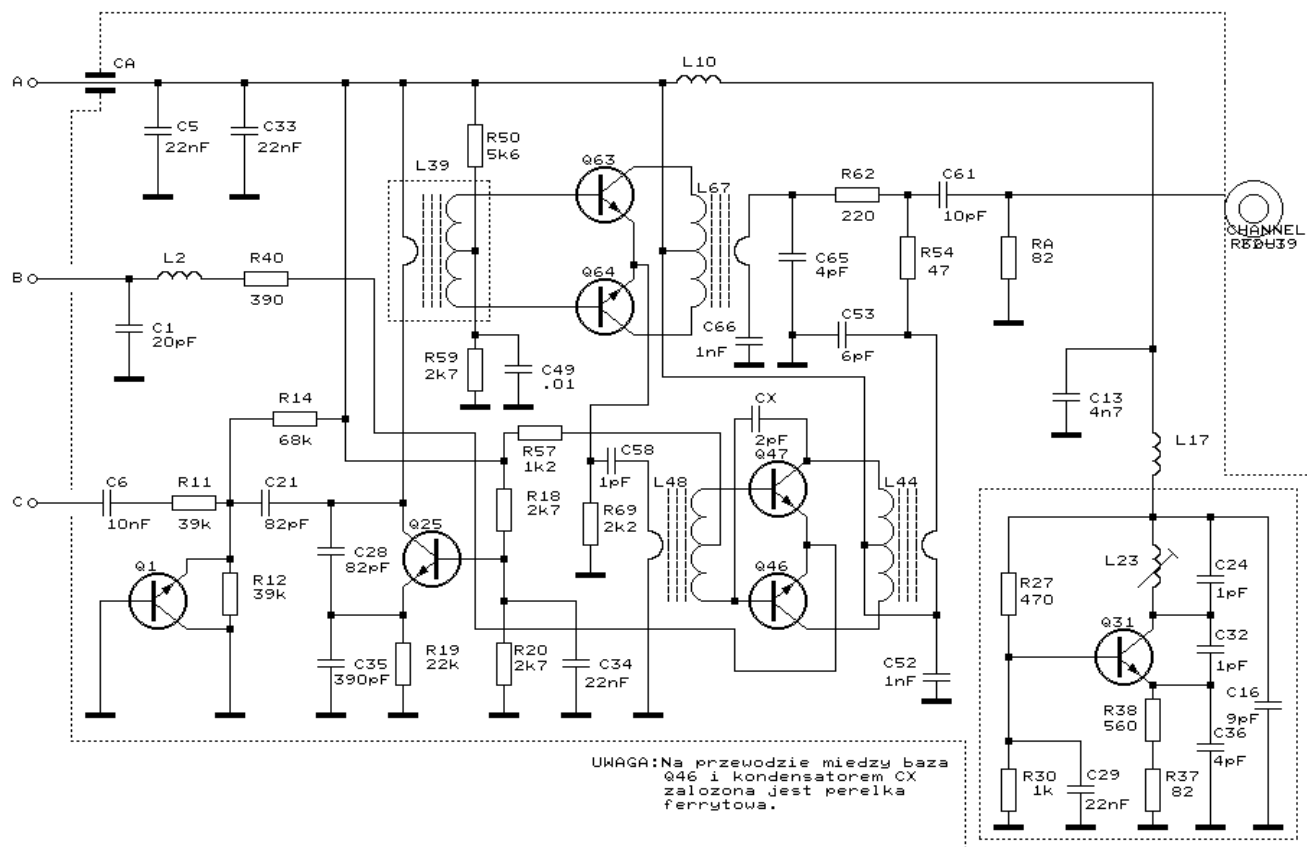

ATARI 600XL/800XL RF MODULATOR C061658

Size	Drawn by	REV
A	Jerzy SOBOLA	1
Date:	December 11, 2002	Sheet 1 of 1

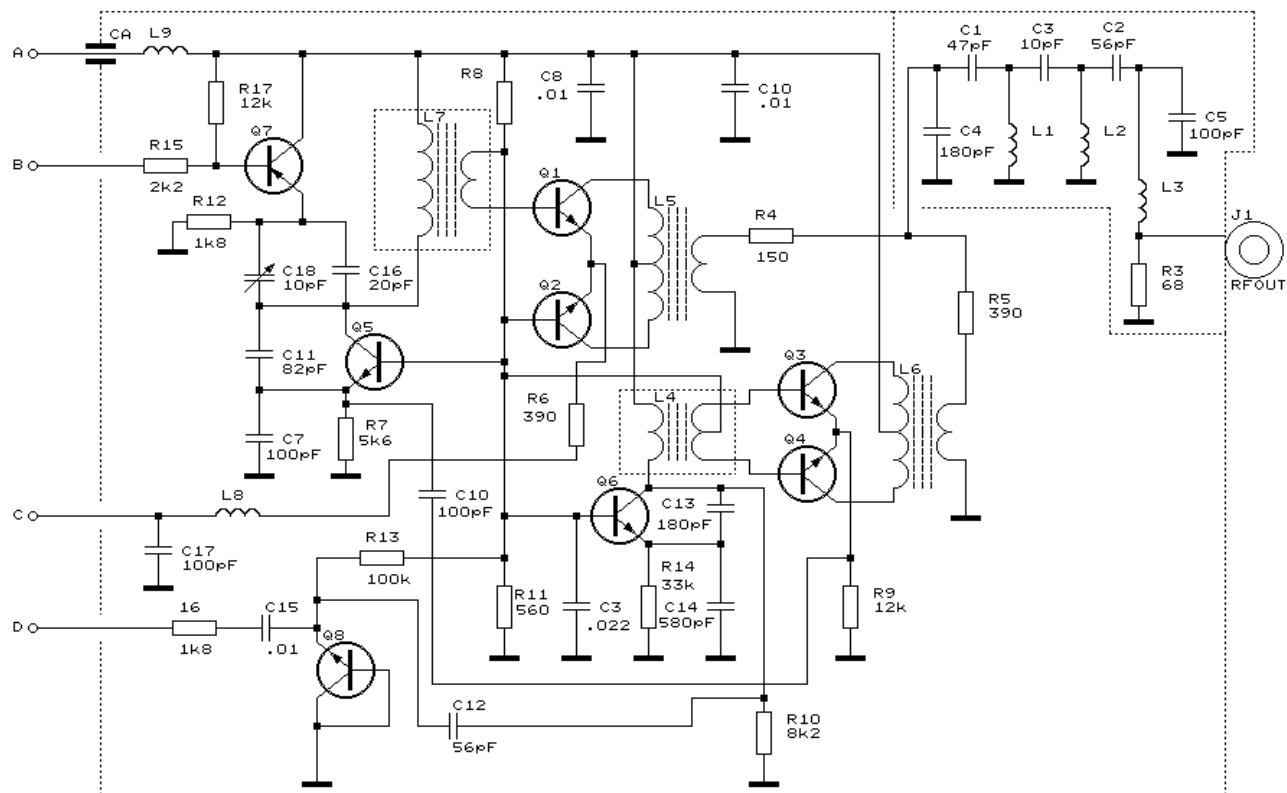

ATARI600XL/800XL RF MODULATOR C061659

Size	Drawn by	REV
A	Jerzy SOBOLA	1
Date:	December 11, 2002	Sheet 1 of 1